CHAÎNE DE MONTAGE DE CISAILLEMENT DES PANNEAUX EN ALUMINIUM

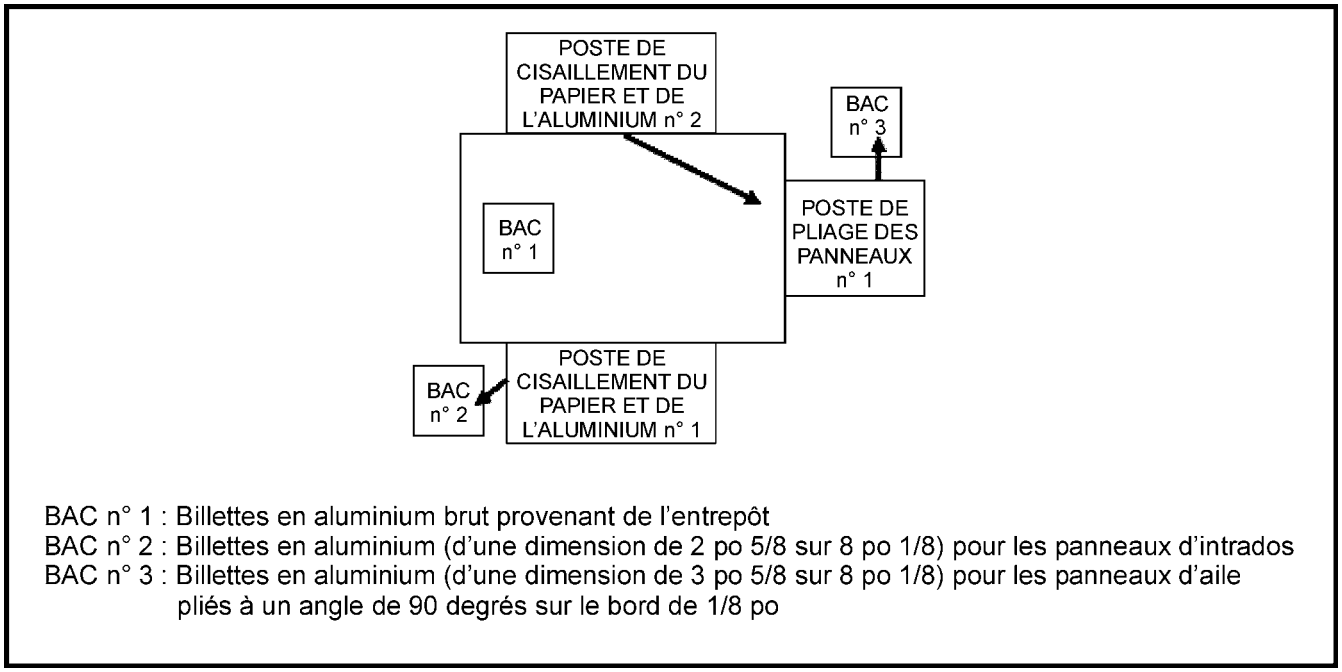

Directeur des cadets 3, 2007, Ottawa, Ontario, Ministère de la Défense nationale

Figure X-1 Chaîne de montage du poste de cisaillement des panneaux en aluminium

Pour chaque modèle réduit de biplan en aluminium à fabriquer :

1. Découper cinq billettes à des dimensions de 3 po 5/8 sur 8 po 1/8 pour les panneaux d'aile (figure 17X-2).

2. Plier les extrémités de ces panneaux d'aile vers le bas à 90 degrés sur chaque extrémité de 8 po 1/8 (à entreposer).

3. Découper cinq cannettes à des dimensions de 2 po 5/8 sur 8 po 1/8 pour les panneaux d'intrados (figure 17X-3) (à entreposer).



D. P. Mathis, Building the B.C. Air Originals Biplane, B.C. Air Originals (page 5)

Figure X-2 Panneaux de la partie supérieure de l'aile

Unofficial convenience copy of A-CR-CCP-803/PF-002, cached 2026-11-08 from https://app.cadets.gc.ca/cadet-publications/A-CR-CCP-803-PF-002/A-CR-CCP-803-PF-002.pdf.
Verify against the official publication.



D. P. Mathis, Building the B.C. Air Originals Biplane, B.C. Air Originals (page 5)

Figure X-3 Panneaux d'intrados

Unofficial convenience copy of A-CR-CCP-803/PF-002, cached 2026-11-08 from https://app.cadets.gc.ca/cadet-publications/A-CR-CCP-803-PF-002/A-CR-CCP-803-PF-002.pdf.
Verify against the official publication.