CHAÎNE DE MONTAGE DU FUSELAGE ARRIÈRE EN ALUMINIUM

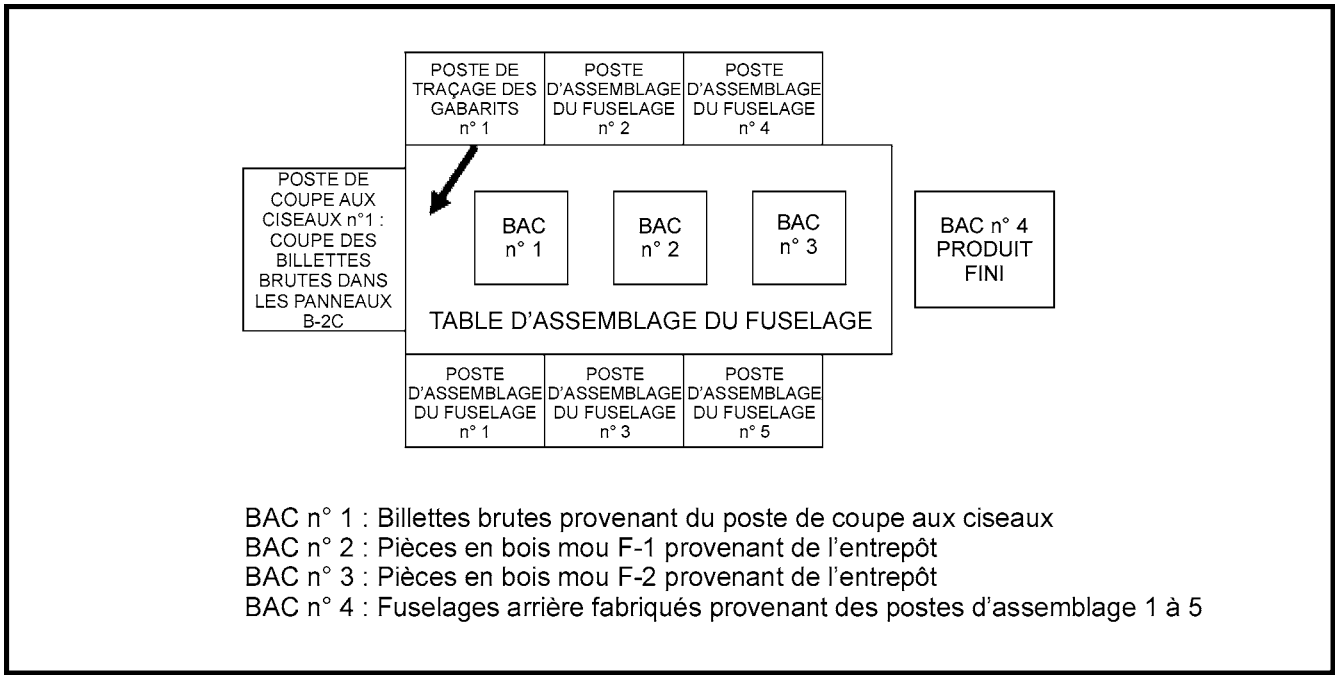

Directeur des cadets 3, 2007, Ottawa, Ontario, Ministère de la Défense nationale

Figure AB-1 Chaîne de montage du fuselage arrière en aluminium

Pour chaque modèle réduit de biplan en aluminium à fabriquer :

1. Marquer une billette brute sous la mention fuselage arrière B-2C.

2. Découper un triangle dans une billette brute pour fabriquer le fuselage arrière B-2C (figure AB-2) (à entreposer sous la mention B-2C).

3. Combiner les pièces en bois F1 et F2 à B-2C, puis les agrafer pour fabriquer le fuselage arrière B-2 (figure AB-3) (à entreposer sous la mention B-2).

Unofficial convenience copy of A-CR-CCP-803/PF-002, cached 2026-11-08 from https://app.cadets.gc.ca/cadet-publications/A-CR-CCP-803-PF-002/A-CR-CCP-803-PF-002.pdf.
Verify against the official publication.



D. P. Mathis, Building the B.C. Air Originals Biplane, B.C. Air Originals (page 5)

Figure AB-2 Coupe en triangle

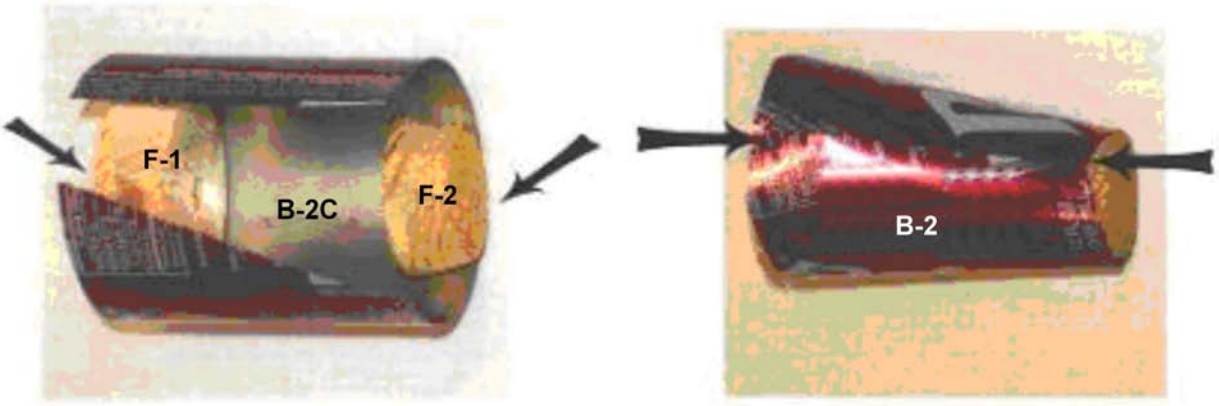

D. P. Mathis, Building the B.C. Air Originals Biplane, B.C. Air Originals (page 6)

Figure AB-3 Achever le fuselage arrière

Unofficial convenience copy of A-CR-CCP-803/PF-002, cached 2026-11-08 from https://app.cadets.gc.ca/cadet-publications/A-CR-CCP-803-PF-002/A-CR-CCP-803-PF-002.pdf.
Verify against the official publication.