
WIRE STATION ASSEMBLY LINE

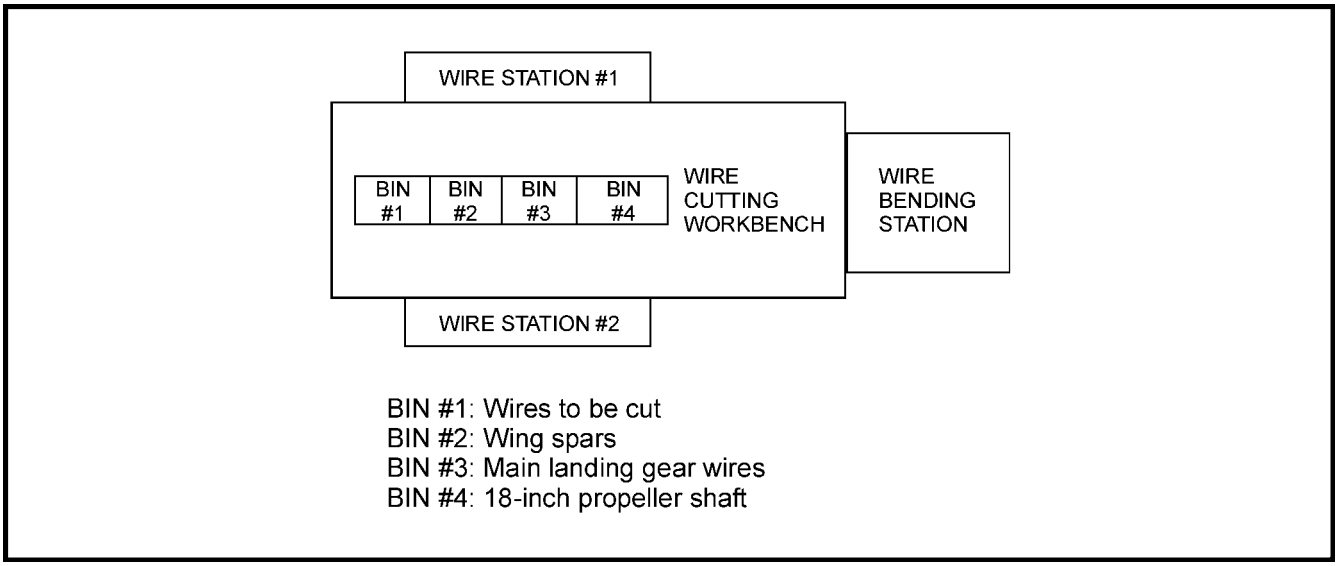


Director Cadets 3, 2007, Ottawa, ON: Department of National Defence

Figure Z-1 Wire Station Assembly Line

For each aluminum model biplane to be constructed:

1. Cut two pieces of 3/32-inch wire 15-3/4 inches long (to stock for wing spars).
2. Cut one piece of 3/32-inch wire 18 inches long (to stock for propeller shaft).
3. Cut one piece of 3/32-inch wire 7-3/4 inches long (for main landing gear).
4. Bend the wire that is 7-3/4 inches long to main landing gear shape (Figure 17Z-2) (to stock).

Unofficial convenience copy of A-CR-CCP-803/PF-001, cached 2026-11-08 from https://app.cadets.gc.ca/cadet-publications/A-CR-CCP-803-PF-001/A-CR-CCP-803-PF-001.pdf.
Verify against the official publication.

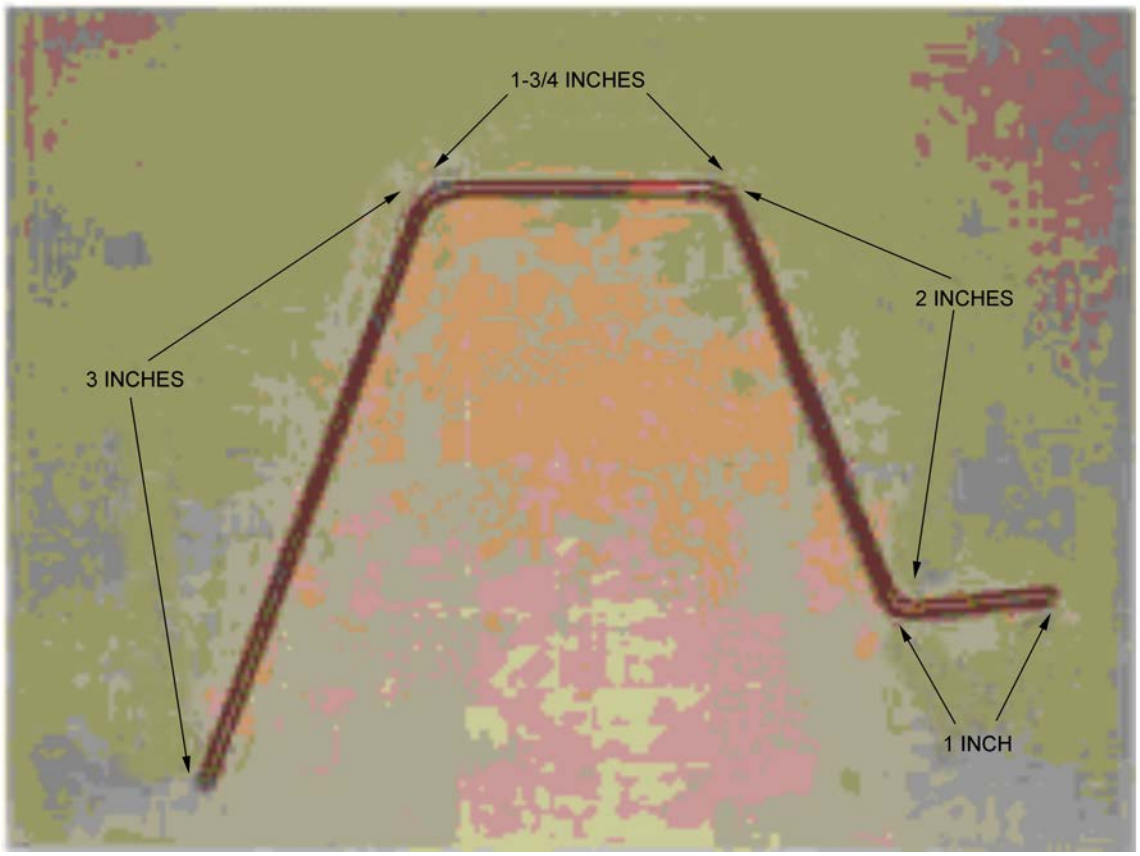

D. P. Mathis, Building the B.C. Air Originals Biplane, B.C. Air Originals (p. 15)

Figure Z-2 First Bends of the Landing Gear

Unofficial convenience copy of A-CR-CCP-803/PF-001, cached 2026-11-08 from https://app.cadets.gc.ca/cadet-publications/A-CR-CCP-803-PF-001/A-CR-CCP-803-PF-001.pdf.
Verify against the official publication.