
ALUMINUM REAR FUSELAGE ASSEMBLY LINE

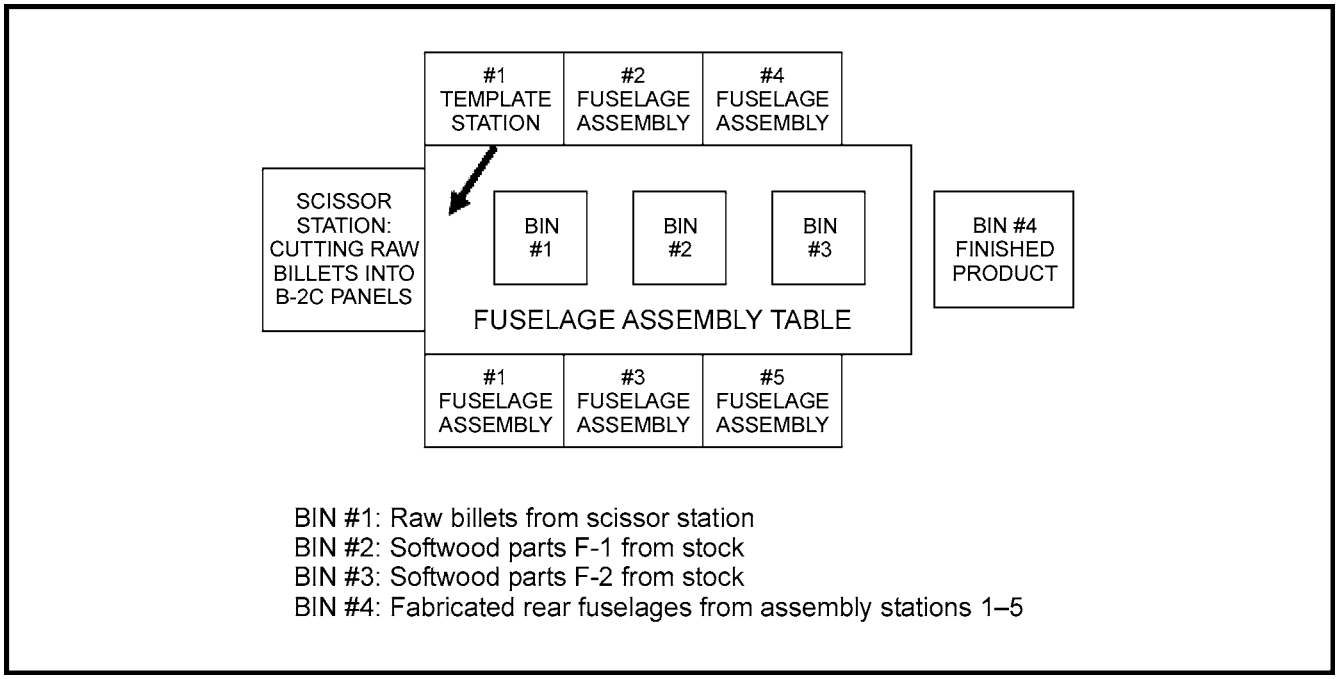

Director Cadets 3, 2007, Ottawa, ON: Department of National Defence

Figure AB-1 Aluminum Rear Fuselage Assembly Line

For each aluminum model biplane to be constructed:

1. Mark one raw billet as B-2C rear fuselage.

2. Cut triangle from one raw billet to create B-2C rear fuselage (Figure 17AB-2) (to stock as B-2C).


3. Combine wood F1 and F2 with B-2C and staple to make rear fuselage B-2 (Figure 17AB-3) (to stock as B-2).

Unofficial convenience copy of A-CR-CCP-803/PF-001, cached 2026-11-08 from https://app.cadets.gc.ca/cadet-publications/A-CR-CCP-803-PF-001/A-CR-CCP-803-PF-001.pdf.
Verify against the official publication.



D. P. Mathis, Building the B.C. Air Originals Biplane, B.C. Air Originals (p. 5)

Figure AB-2 Triangle Cut

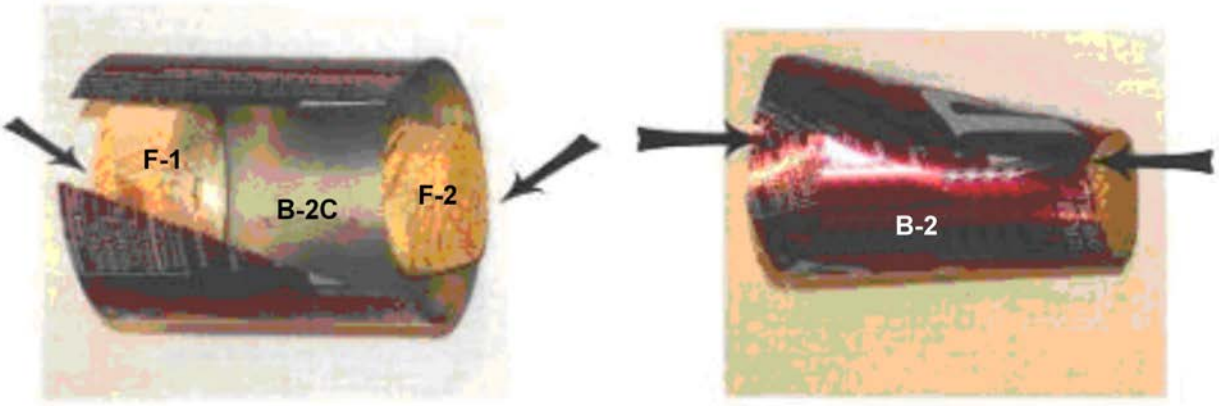

D. P. Mathis, Building the B.C. Air Originals Biplane, B.C. Air Originals (p. 6)

Figure AB-3 Completing the Rear Fuselage

Unofficial convenience copy of A-CR-CCP-803/PF-001, cached 2026-11-08 from https://app.cadets.gc.ca/cadet-publications/A-CR-CCP-803-PF-001/A-CR-CCP-803-PF-001.pdf.
Verify against the official publication.